


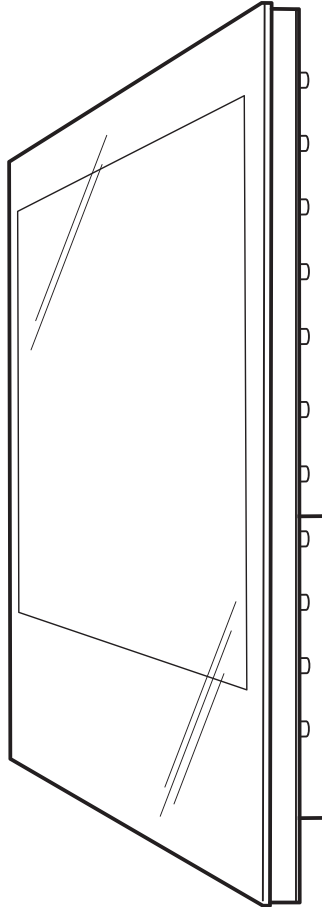
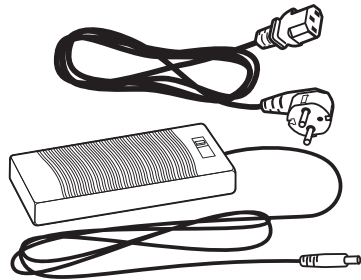
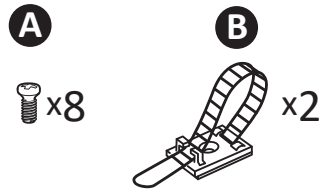



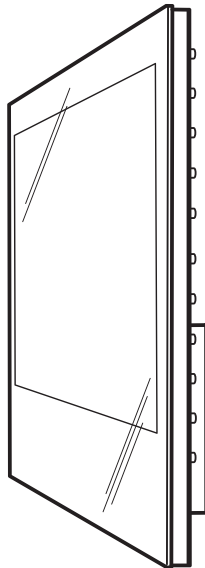


www.aviselectronics.com

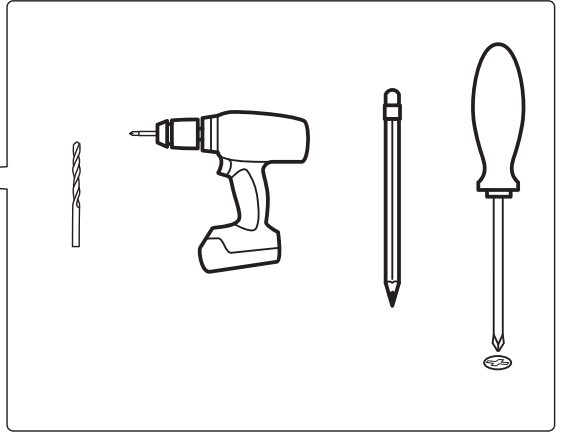


AVS240K

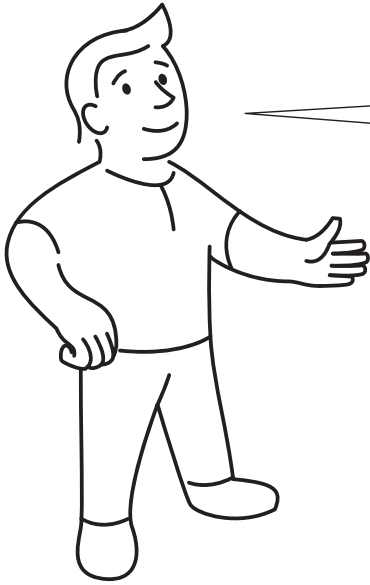

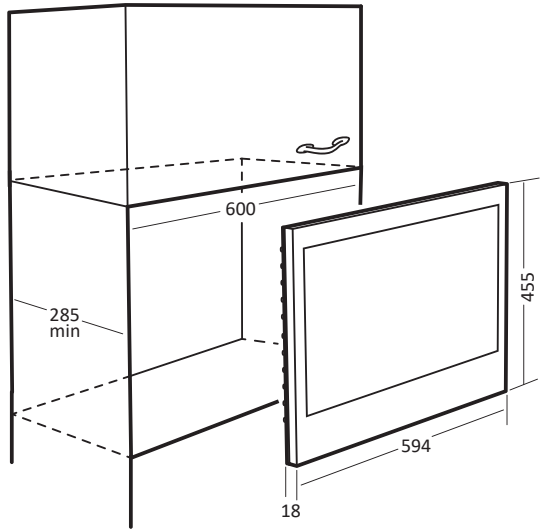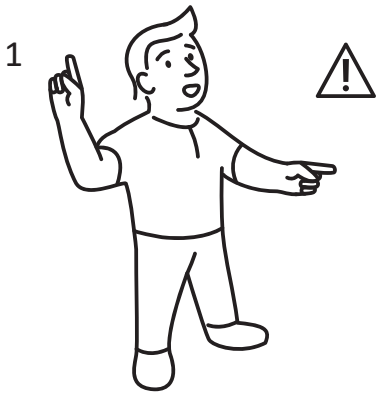

A

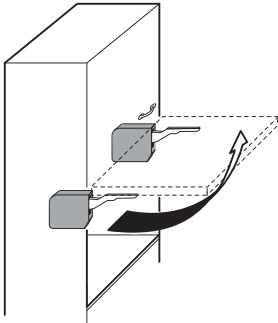

1

blum
Aventos HK29



2

KESSEBÖHMER
FREEflap forte-F




3

HÄFELE
Free Flap 3.15 F



B

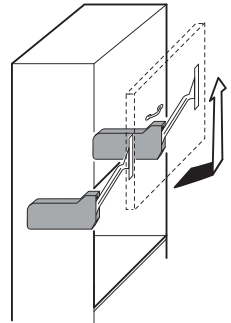

1

blum
Aventos HL27/38



2

KESSEBÖHMER
FREEslide Q3us



3









HÄFELE
Free Up Q3us



A1

blum

Aventos HK29

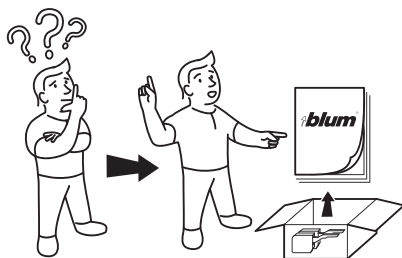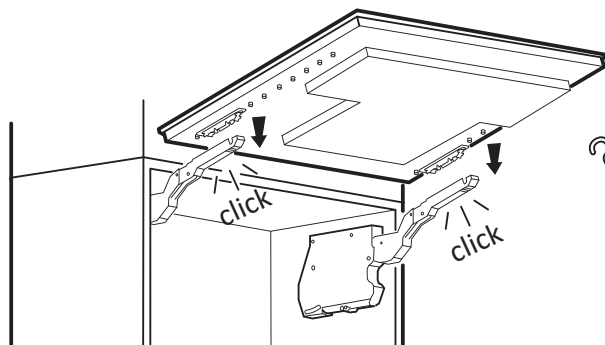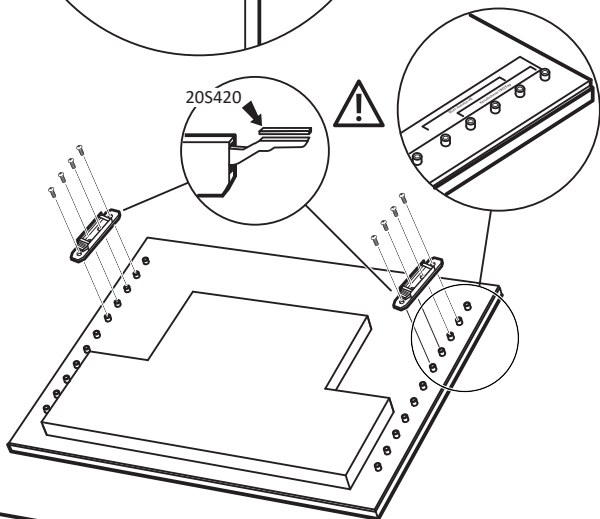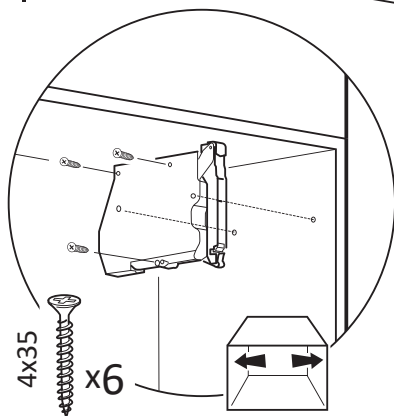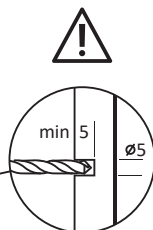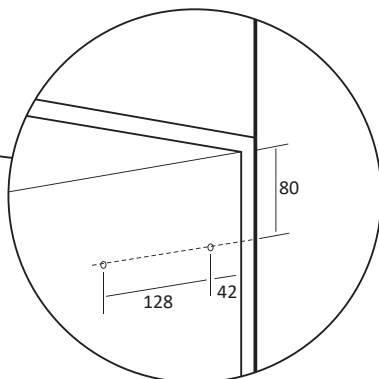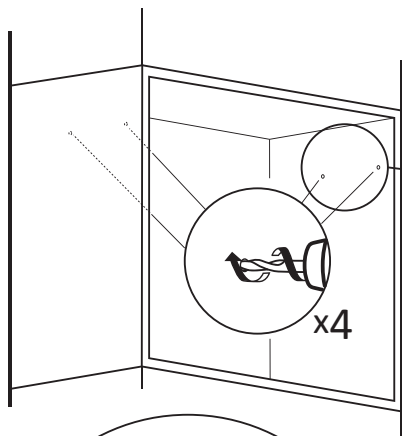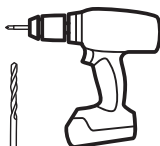


A 23

KESSEBÖHMER

FREEflap forte-F

HÄFELE

Free Flap 3.15 F

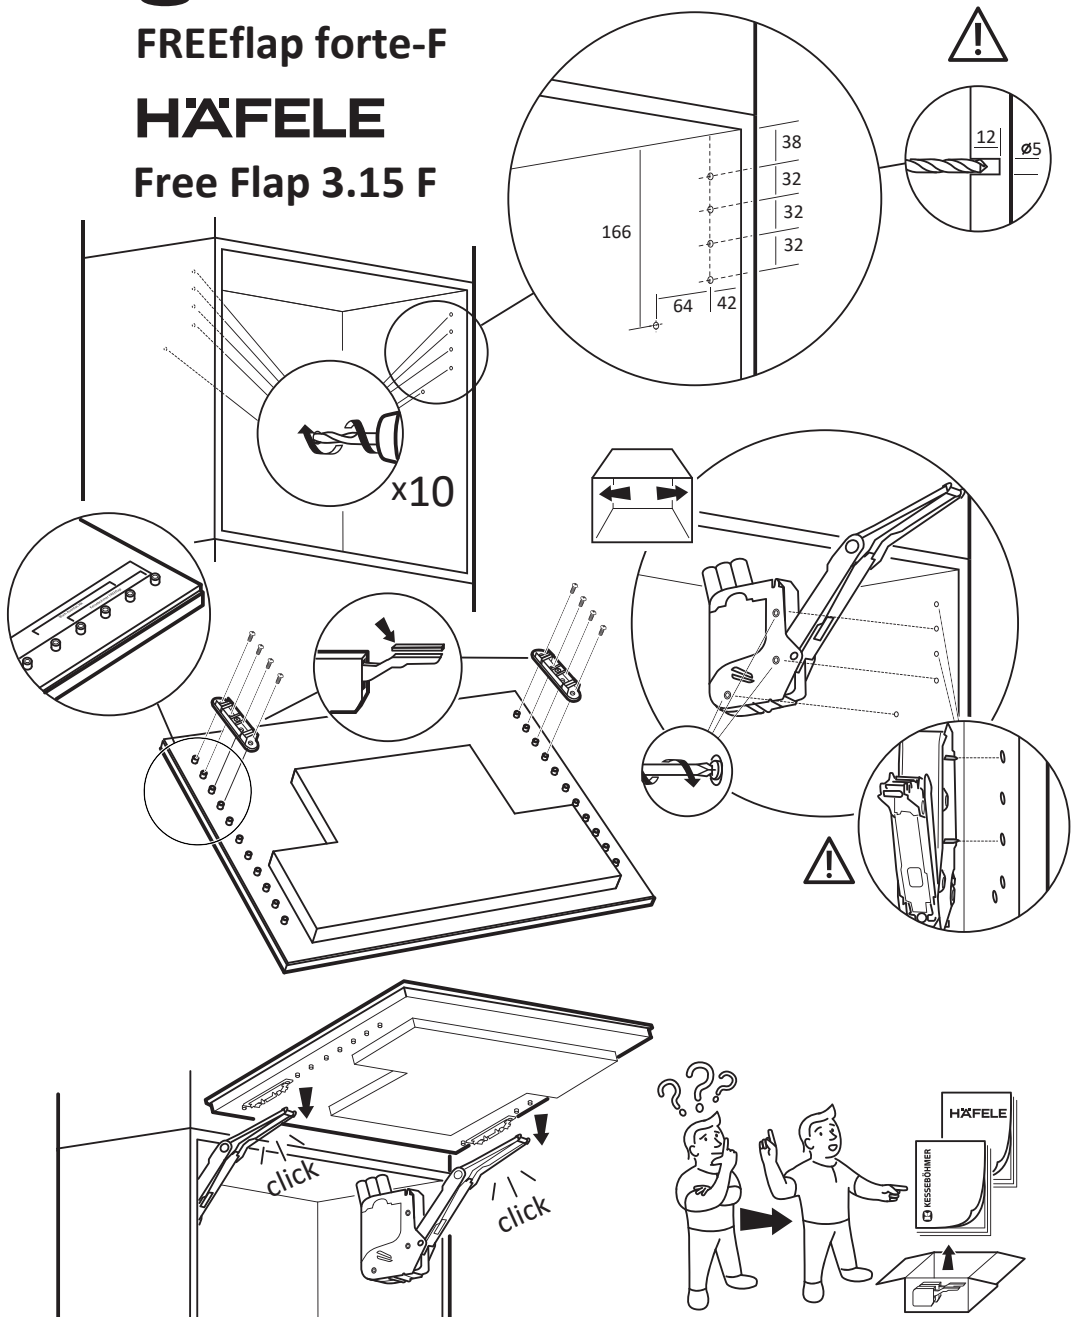









B23

 **KESSEBÖHMER**


FREEslide Q3us

HÄFELE

Free Up Q3us

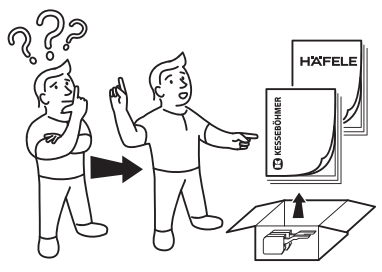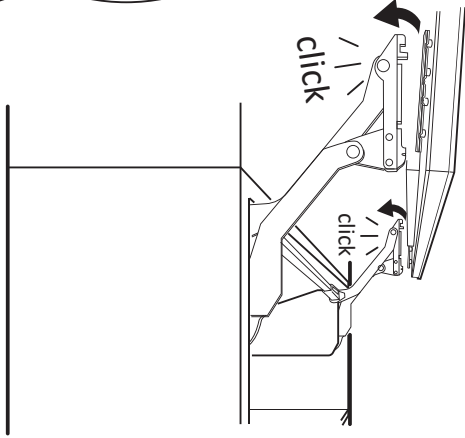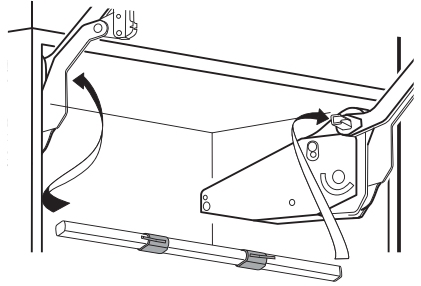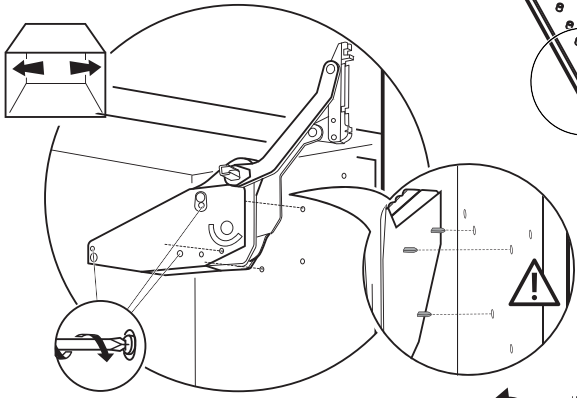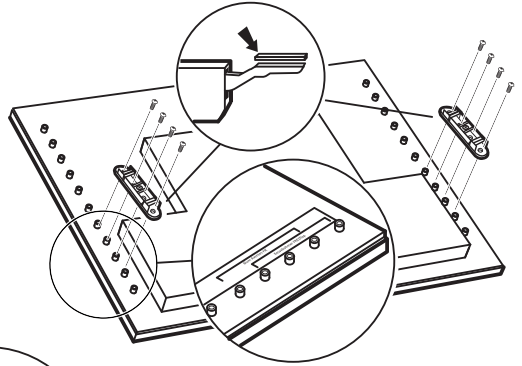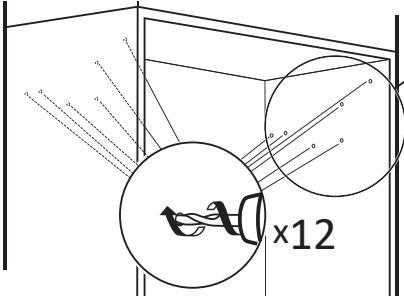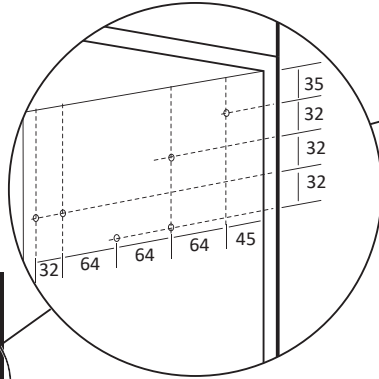
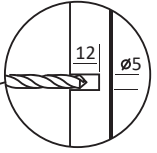


3


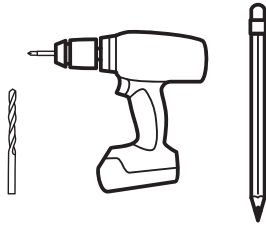






(A)

(B)

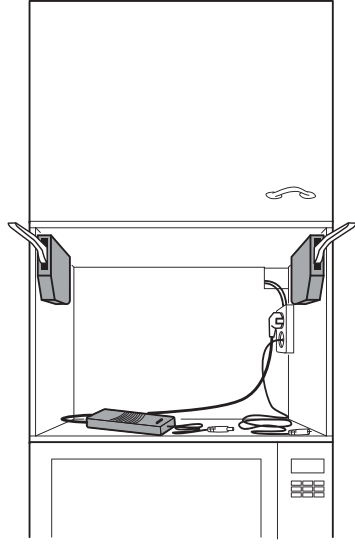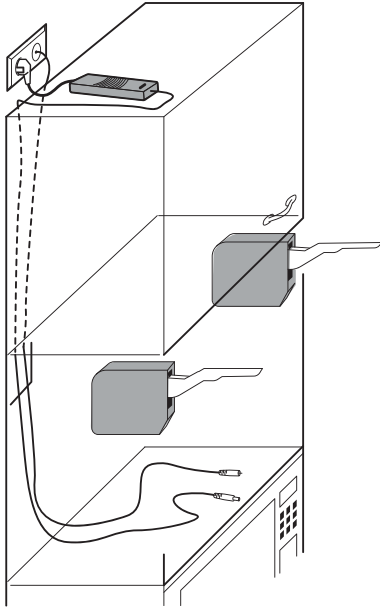

4

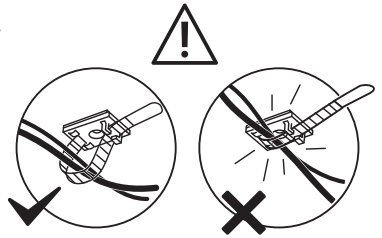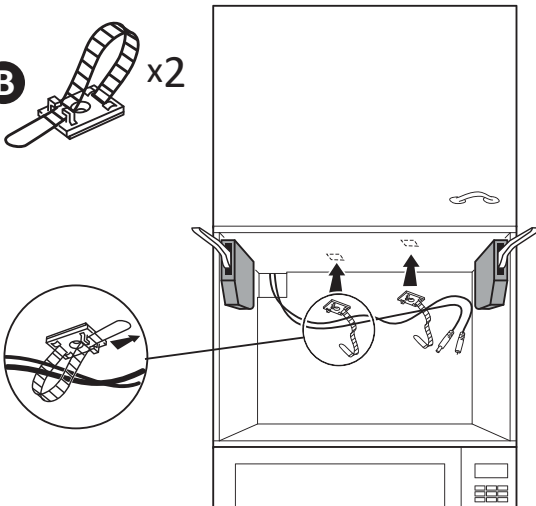

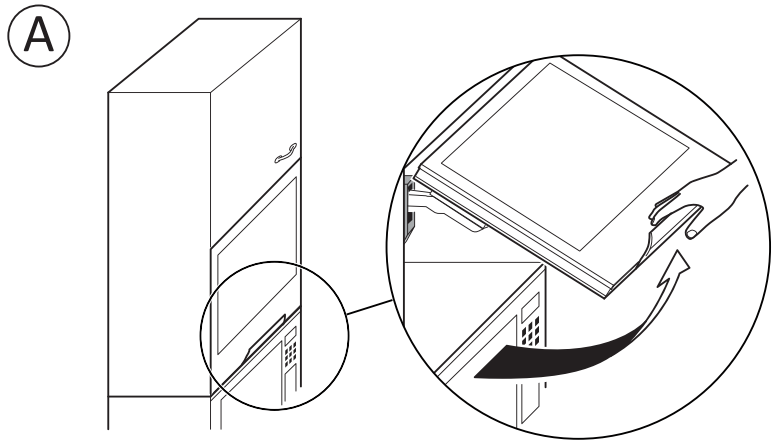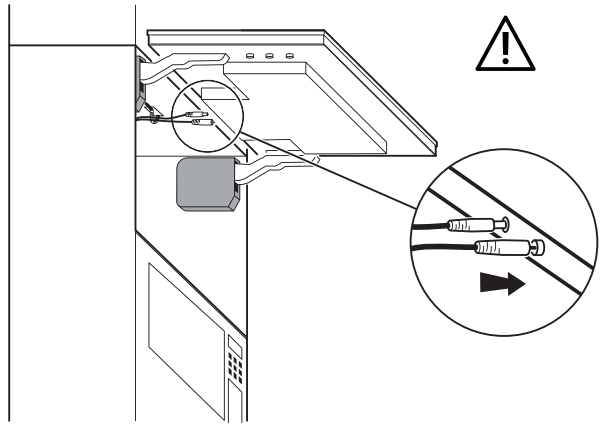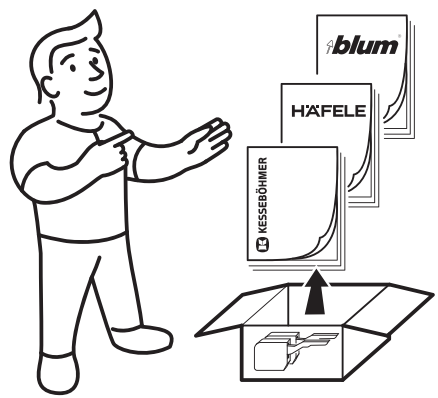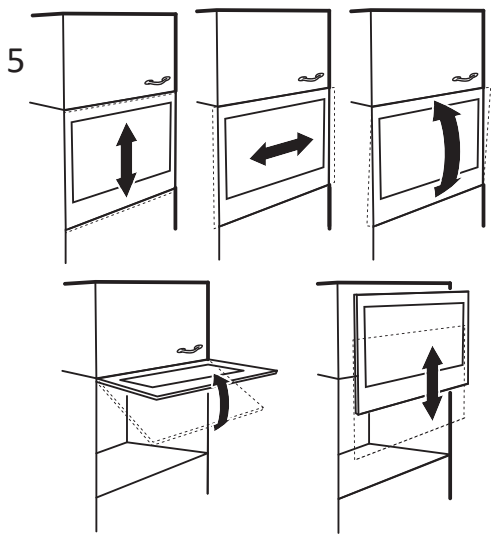

B

